



Sensor – Engine Coolant Temperature – Remove and Install (21 190 0)

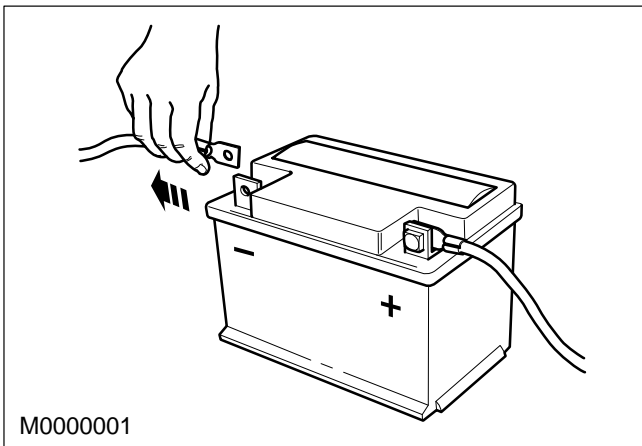


Remove


1. Disconnect the battery earth lead.

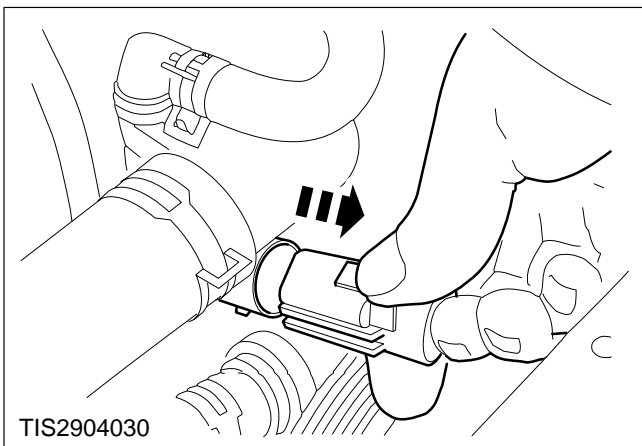

2. Disconnect the multiplug.

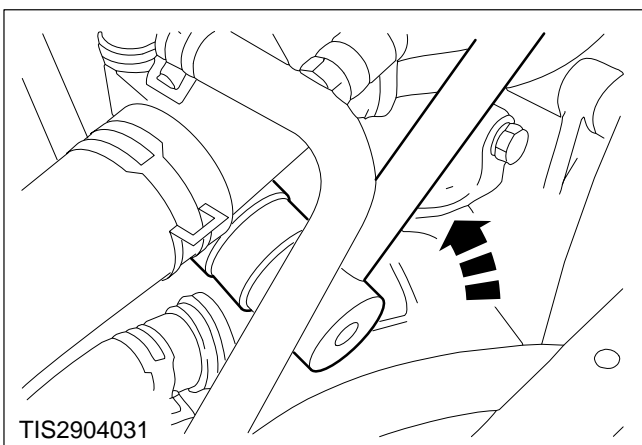

3. Unscrew and remove the sensor.

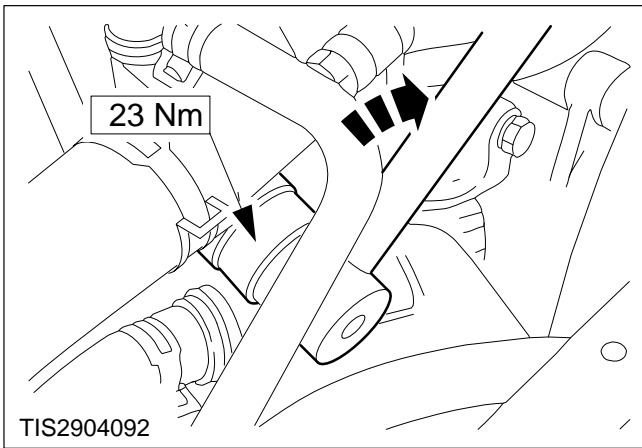

Install

4. Refit the components in reverse order.