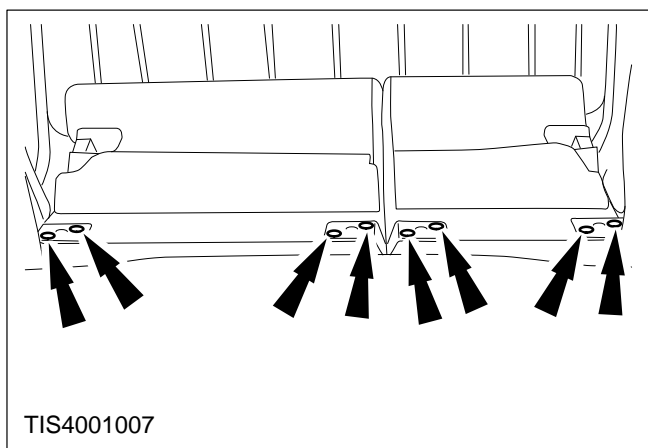


Backrest – Rear Seat – Remove and Install (40 128 0)**Remove**

- 1. Fold the rear seat cushion and backrest forwards.**
- 2. Fold the backrest carpet trims forwards to reveal the hinge bolts.**
- 3. Remove the seat backrests (eight bolts).**

Install

- 4. Refit the components in reverse order.**