
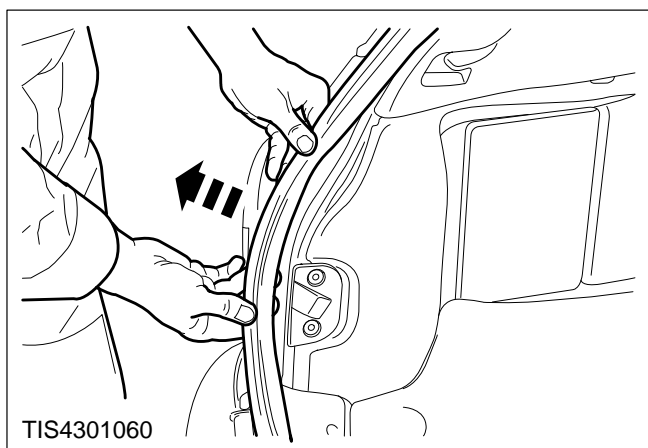


**Panel – Load Space Trim (Wagon) – Remove and Install (43 746 0)****Remove**

- 1. Locally detach the tailgate weatherseal.**

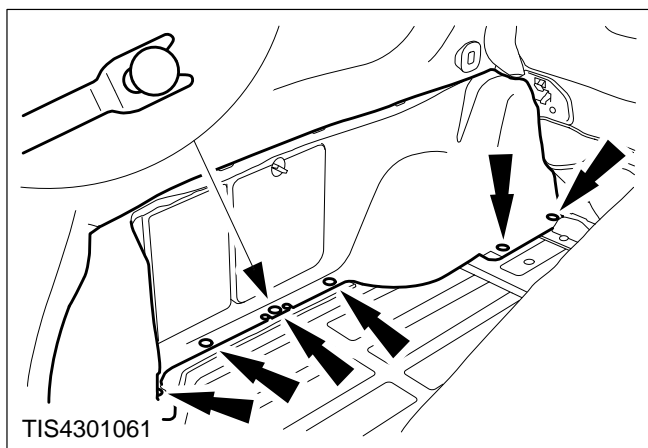

- 2. Remove the trim.**

Disconnect the speaker.

**Install**

- 3. Refit the components in reverse order.**